

**“ALLURE” LLC**



*Allure*

*Vestra salus – nostra salus*

**PASSPORT**

**Melanger ALLURE JR5T (4-0,25-230 x 1-50-A) 4 кг, 220V-1 ph.**

**Melanger ALLURE JR5 COMPLETE (4-0,25-230 x 1-50-A) 4 кг, 220V-1 ph.**

## 1. GENERAL INFORMATION AND APPOINTMENT

The equipment is intended for the preparation of chocolate mass from the raw material. It is used in confectionery factories.

The main nodes of the Melanger are:

- a bowl of food stainless steel, in the bottom of which a granite disk is mounted;
- a pair of granite runners with an independent spring clamp;
- the main electric drive, consisting of an electric motor and a geared motor;
- housing;

The operating parameters are set and monitored using the control panel.

Melanger is performed as follows:

- for connection to a network of an electric current - single-phase 230 V ~ 50/60 Hz

An example of the appearance of equipment



## 2 MAIN TECHNICAL CHARACTERISTICS

### 2.1 Main characteristics

Melanger Settings / Model	JR5T / COMPLETE (4 кг)
Power Supply	230V : 50/60Hz
Main drive kW	0.25
Loading, max, kg	4

Current is not more than, Amps	2,5
Millstone pressure on the bottom, kg	2,5 – 45
Max. rotation speed at 50 Hz, RH	103
Dimensions of the machine / package, max, mm	450h*390*485 / 600h *510*530
Net Weight / Gross Weight, kg	26/40

## 2.2 Designation of the product:

Melange-M-W-VxF-Hz-X

Where "M" - no more than 3 characters (digits from 0 to 9), indicating the maximum load of raw materials kg,

"W" - no more than 3 symbols (digits from 0 to 9, and / or the symbol "."), Denoting the power of the main electric drive kW,

"VxF" - no more than 3 symbols (digits from 0 to 9), denoting the supply voltage three-phase (single-phase) V,

"Hz" - no more than 2 symbols (digits from 0 to 9), denoting the frequency Hz,

X - the letter from A to Z, designating the design of the product.

Additional characteristics of the JR5 COMPLETE model:

- the strengthened case;
- multimode electric motor.

Additional options for JR5 COMPLETE:

R - equipment for raw food (JR5 COMPLETE / R);

O - body material - oak (JR5 COMPLETE / O).

Or JR5 COMPLETE / OR.

## 3 COMPLETENESS

The scope of supply includes:

- product;
- passport - 1 pc.

Note: The scope of supply may be changed by agreement of the parties. The Operator's Manual is provided in to the buyer's e-mail.

## 4 SAFETY REQUIREMENTS

4.1 The equipment meets the requirements of GOST 12.2.124, GOST 24885, GOST R IEC 60204-1, GOST R 51317.6.2, GOST R 51317.6.4.

## **5 RULES OF USE**

The operation of the Equipment must be carried out in accordance with the requirements of the Operating Instructions for each unit of Equipment.

## **6 TRANSPORT AND STORAGE RULES**

6.1 The equipment can be transported by any mode of transport, in accordance with the rules for the carriage of goods established for these modes of transport.

6.2. The equipment should be stored in storage rooms or in areas under a canopy.

6.3. Conditions of transportation and storage of equipment with regard to the effect of climatic factors of the external environment - GOST 15150, transportation and storage conditions in terms of mechanical factors - in accordance with the requirements of GOST 23170.

## **7 DISPOSAL CONSIDERATIONS**

7.1. The equipment is recyclable after a decision has been made regarding the impossibility of its further operation.

7.2 The persons responsible for disposal must ensure that the process for the disposal of equipment meets the requirements of this standard.

7.3 The equipment must be disposed of in a manner that excludes the possibility of its recovery and further operation.

## **8. MANUFACTURER'S GUARANTEES**

8.1. The seller sells the equipment to the Buyer in accordance with the manufacturer's declared passport characteristics.

8.2. The seller guarantees the operation of the equipment with the manufacturer's specifications, subject to the rules of operation.

8.3. The warranty period for the supplied equipment is 12 months.

8.4. The seller provides a guarantee for all identified factory defects, provided that the equipment will be used in accordance with the instruction manual.

8.5. The warranty does not cover accessories:

- with natural aging;
- Operated with overload;
- used for other purposes;
- subjected to unauthorized opening or disassembly (if the possibility of opening is not specified in the instruction manual);
- used in violation of operating conditions;

- with mechanical breakdowns;
- the design of which has been amended.

8.6. The out-of-order equipment (unit / component) is subject to mandatory return to the Seller. When returning, you must provide the following documents:

- A claim with a list of alleged defects;
- A copy of the delivery note or transport document for which the equipment was released to the buyer.

In the absence of one of the documents, the Supplier has the right to refuse warranty of the product.

8.7. In the event of failure of the equipment during the warranty period and in the presence of all documents under item 8.6, the Seller undertakes to make an examination of the equipment. If the factory defects are identified and the case is recognized as a warranty, the Seller repairs or replaces the equipment. **TRANSPORTATION COSTS ARE NOT INCLUDED IN THE WARRANTY OBLIGATIONS.**

## 9 ACCEPTANCE CERTIFICATE

Melanger \_\_\_\_\_ Serial № \_\_\_\_\_,

Release date \_\_\_\_\_ .

« \_\_\_\_ \_\_ » \_\_\_\_\_ 2020 is recognized as fit and authorized for use.

stamp

Date \_\_\_\_\_

Specialist of technical control \_\_\_\_\_

(Signature)

(Full Name)

Date of shipment \_\_\_\_\_

Responsible person \_\_\_\_\_

(Signature)

(Full Name)

stamp

**10 OPERATING INFORMATION**

**ATTENTION! WITHOUT COMPLETING THIS SECTION, THE MANUFACTURER'S WARRANTY IS NOT SAVED!**

Melanger \_\_\_\_\_ Serial № \_\_\_\_\_,

Release date \_\_\_\_\_ .

The Melanger is put into operation at «    » \_\_\_\_\_ 2019

---

(Company name)

Responsible person \_\_\_\_\_

(Signature)

(Full Name)

stamp

## 11 MOVEMENT OF THE PRODUCT WHEN OPERATING

Date of installation	Place of installation	date of disassembly	Наработка		Reason for dismantling	Signature of the person responsible for the installation (removal) of the seal
			Since the beginning of operation	After the last repair		

## 12 MAINTENANCE AND REPAIR MAINTENANCE

Date	Malfunction	Type of works performed	Position, name of the performer